Item and Method of Inspection	Reject If
NOTE: If VIN cannot be found or two or more VINs do a licensing agent to apply for a BC Assigned VIN. For more	not match, do not start the Inspection. Refer customer to re information, please refer to the VIN section of the Manual.
1. Accelerator	
With engine idling, manually depress accelerator, then releasing, manually inspect	
a) pedal	a) missing, binding, will not return to idle position, throttle position sensor does not operate
	- throttle cable is seized, binding, frayed
	<ul> <li>anti-slip material missing, loose, excessively worn</li> </ul>
b) mount	b) insecure, corroded
c) linkage	c) worn, broken, insecure, inferior type, inferior retainers, not OEM equipped standard
d) springs	d) missing, broken, stretched, corroded, not OEM or equivalent type
	OUT OF SERVICE
	i) Will not return to idle position immediately upon release
2. Fuel System	
a) cap(s)	a) missing, not OEM or equivalent type, does not prevent spillage
b) filler and overflow tube	b) leaking, insecure
c) tank(s)	c) leaking, insecurely mounted, cracked, broken welds, repair on any type tank other than metal
d) tank mount(s)	d) missing, cracked, broken, loose, fasteners missing or loose
e) strap(s)	e) cracked, loose, broken, missing, not OEM or equivalent type (i.e. chain)
f) fuel lines	f) leaking, cracked, insecurely mounted, not fuel approved type, cracked or worn to cord layer
g) pump	g) leaking, insecurely mounted, physically damaged
h) air intake	h) flame arrestor or filter removed
	OUT OF SERVICE
	i) Leak at any point including auxiliary equipment.
	<ul><li>ii) Fuel cap missing.</li></ul>
	<ul><li>iii) Tank(s) insecurely mounted.</li></ul>

Item and Method of Inspection	Reject If
LPG OR DUAL-FUELLED VEHICLES	
Refer to Pressure Fuel portion of this manual.	
3. Exhaust System	
With engine running, aurally and manually inspect:	
a) manifolds	a) missing, broken, cracked, loose, leaking
b) mufflers	b) leaking, missing, patch affixed other than by weld
c) resonators (applicable units)	c) leaking, patch affixed other than by weld
d) tail pipes	d) leaking, perforated, missing, patch affixed other than by weld, collapsed, end is pinched
e) exhaust pipes	e) leaking, perforated, missing, cracked, collapsed, patch affixed other than by weld
f) mounting hardware	f) missing, loose, broken, insecurely mounted
g) leaks	g) leaking along system or at joints
h) holes	h) other than made by the original equipment manufacturer
i) location	<ul> <li>i) any part of exhaust system is closer than 25 mm (1 in.) to any part of fuel, brake system or any combustible material and is not protected by a shield.</li> <li>any component passes through an occupant compartment</li> </ul>
j) tail pipe termination	<ul> <li>j) does not terminate within 50 mm (2 in.) of outside perimeter of the passenger compartment expelling exhaust outwardly (includes trunk)</li> </ul>
k) exhaust cut-out	k) exhaust cut-out is installed
<ol> <li>catalytic converter (light vehicles 1988 or later) – if OEM equipped</li> </ol>	l) missing or replaced with a non-catalytic muffler
m) noise emissions	<ul> <li>m) excessive</li> <li>confirm noise level with decibel meter for any vehicle with non-OEM, modified or altered exhaust system</li> </ul>
	OUT OF SERVICE
	i) Any exhaust leak within the perimeter of the occupant compartment of the vehicle with holes in the floor (includes trunk).

Item and Method of Inspection	Reject If
4. Clutch	·
With manual transmission, apply the parking brakes, start the engine, depress the clutch pedal to its maximum travel. a) adjustment/disengagement	a) does not function as per OEM standard, does not
	allow disengagement of transmission from engine
5. Transmission Neutral Safety Switch/Remote Start/Shift	Pattern
Apply the parking brakes, turn the ignition switch to the start position and shift the transmission into each gear. Remote start – from a vehicle control position, engage remote start.	
Inspect: a) operation	<ul> <li>a) engine starts in any selector position other than Park or Neutral on automatic transmission;</li> <li>engine starts in any selector position other than neutral on manual transmission when vehicle is equipped with a remote start system</li> </ul>
b) shift pattern	<ul> <li>b) not in view of driver for both manual and automatic transmission</li> <li>automatic transmission selector indicator is not functional or out of sequence</li> </ul>
6. Drive Shaft	
With parking brakes on and gear selector in neutral, raise the vehicle so the drive-shaft is accessible. Place a small bar between the yoke and the U-joint and rotate shaft fore and aft.	
a) U-joints	a) rotational free play is evident, bolts loose, not in phase
b) U-joint cups	b) rust is present coming from cup indicating a lack of lubrication and potential failure
c) U-clamp	c) missing, nuts are missing, loose or stripped
d) slip joint	d) seized, worn to 1.6 mm (1/16 in.) rotationally on spline
e) centre bearing(s)	e) loose mounting, rubber mount deteriorated, bolts loose or missing

Item and Method of Inspection	Reject If
7. Front/Rear/Spindles/Axles	
a) condition	a) bent, welded, does not meet OEM specifications
b) seals	b) missing, leaking, installed incorrectly
Aurally inspect axle:	
c) wheel bearings	c) play exceeds manufacturer's specifications, noise (e.g. grinding)
8. Front Wheel Drive	
With the front of the vehicle raised, aurally inspect:	
a) constant velocity joint	a) loose, with vehicle moving noise develops when wheels turned to limits
	- boots are split, cracked or deteriorated
b) axles	b) bent, welded
c) bearings	c) play exceeds manufacturer's specifications, noise (e.g. grinding)
9. Belts	
Manually inspect alternator and power steering belts	
a) condition	a) missing, broken, frayed, cracked beyond OEM specifications, oil soaked
b) adjustment	<ul> <li>b) deflection not within manufacturer's specifications, if OEM specifications not evident, then between 12 mm and 20 mm (1/2 in. to 3/4 in.)</li> </ul>
c) pulleys	c) bent, broken, cracked, out of alignment
10. Engine/Transmission Mount	
Manually inspect mount	
a) condition	<ul> <li>a) missing, welded, loose, bent, bolts missing, insulator missing, insulation broken or badly deteriorated, saturated with oil, inferior substitute</li> </ul>
b) attachments	b) mounting bolts are missing or loose

Item and Method of Inspection	Reject If
11. Fluid Levels	
Check fluid levels (add if required)	
a) brake fluid	a) less than manufacturer's specified level
b) power steering	b) less than manufacturer's specified level
12. Engine shut down controls	1
Manually inspect:	
a) ignition switch	a) engine will not shut down when in the "OFF" position, missing
b) electric solenoid	b) engine will not shut down when in the "OFF" position
c) manual cable (if equipped)	c) inoperative

This page left intentionally blank.